# MARKERS, INC. NEW Flex-Tension Outfield Fence

## featuring Pocket-Net™ Technology

For easier installation, pockets are located every 3 inches to secure the fence to each support pole.

FlexTension Fence Kit #FT160-19 includes: 160 ft Pocket Net Fence, 5 Stabilizing Poles, 14 Flex Poles, Installation Accessories

FlexTension Fence Kit #FT160-19-DLUX includes: 160 ft Pocket Net Fence, 5 Stabilizing Poles, 14 Flex Poles, Installation Accessories, 19 Ground Sockets

#### YOU MAY ALSO NEED THE FOLLOWING TOOLS:

Tape Measure • String • Chalk or Spray Paint • Mallet or Drill • Sharp Scissors (if cutting is required)

#### A - Lay out fence line

Using tape measure lay out the radius. Chalk or paint the line where fence will be installed.

#### **B** - Mark pole locations


Starting at foul line, mark 19 pole locations approx. 8.5 ft. apart for each 160 ft. set.


Note: If using multiple sets, mark end locations close together between each set. You can allow for openings 2 ft. wide between sets for a gateway, or keep them close for a fence with no gateway.


3 sets 314 linear ft. 2 sets 157 linear ft. 1 set

471 linear ft.


#### (see 3 diagrams below)










### Suggested positions when installing 2 or more fence rolls (L-R)

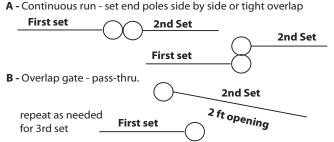

### Installing Poles / Ground Sockets

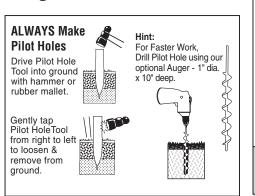




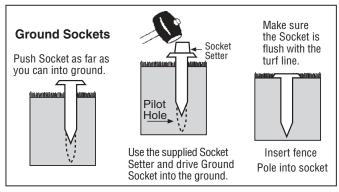

(OVER)

File: Flex Fence instr pg1 of 2 (2018)

## After all Pocket Poles are installed...



### Installing your Pocket-Net<sup>™</sup> fencing is this easy! Start at foul line




Find the first opening or "post pocket" by running your hand along the bottom edge of the fence material; pull pocket open.



Raise the fence open pocket and slide the material approximately 12 inches over the post and cap combination. (Remaining material can be loosely draped over for now.)

C Stretch the material to the next post, locate the nearest pocket and repeat Steps A-B for all posts.


Gathering material 12" at the top of each pole will make it easier to stretch the material to the next one in line.

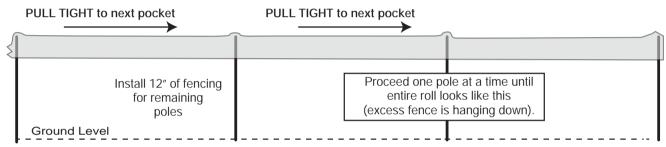


(D) Once you have successfully attached all of the required pockets, the material can be pulled down to the bottom end of each post. For best appearance, confirm that the fence is tightly stretched between each post and does not sag. Any excess fencing can be easily cut with sharp scissors.  $\mathcal{V}$ 



It's as easy as pulling on socks!



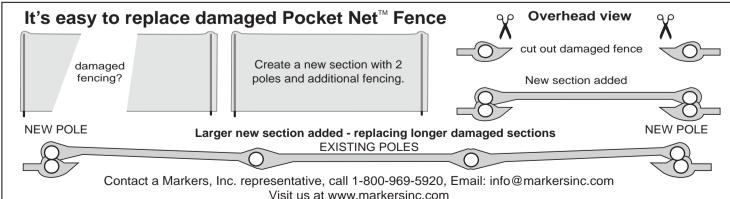

File: Pocket Net Fence instr pg2 of 2 (2018)

