

Call Toll Free: 1-866-617-6275



**Products** 

**Parts** 






Contact **Bleachers &** Us **Benches** 

### **Outfield/Utility Fencing Field Layout**

1. Use a line anchored at home plate for curve reference. Start at the Foul Line and measure off and mark all Ground Socket locations 10 feet apart.

2. If you are using the SmartPost<sup>™</sup> Kits: Create pilot holes and install all Ground Sockets into marked locations. See Ground Socket instruction details. Assemble and insert all posts into sockets.

2a. If you are using the SmartStake<sup>™</sup> Kits: Create pilot holes, then assemble and insert all stakes into around at marked locations.

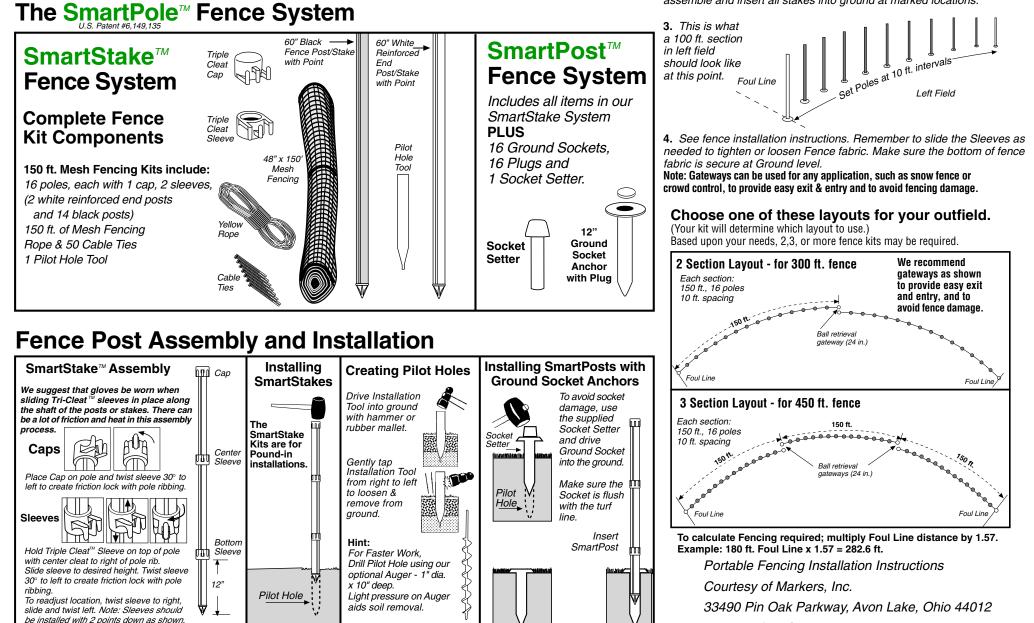


## "Value Added" Rope Support

We have included Rope and Cable Ties to add value and durability to your fence installation. The High-Visibility Yellow Rope, when installed at the top of the fence, provides added support and professional appearance to your field.

You can install the rope *before* or *after* you hang the fence, then install cable ties *loosely* when finished. Use 3 ties for every 10 ft. length between posts. Rope should slide freely through the black caps.

Fencing material tends to sag after exposure to the elements. Simply untie, tighten and retie the rope to maintain a taut fence.


The "A" Knot for End Posts



# **Our Fence Material**

#### MESH STYLE FENCING


Our Mesh Fencing is designed with 3 Reinforced Bands - Top, Middle and Bottom for added support at the point of anchoring. Attach Mesh Fencing material to cap - using Reinforced band at top of material. Then attach material to mid-point sleeve at Reinforced band, and finally to bottom sleeve. Reinforced Fence material may be pulled taut by moving sleeves up or down.

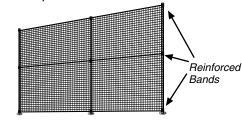

| F |   |   | ł |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
|   |   |   | T |   |   |   |   |   |   |   |
|   |   |   | h | n | Ħ | H |   | Ħ |   | Ŧ |
|   | Π | Ħ | U |   | Щ | Ħ | Π | Ħ | Π | Ħ |
| Ħ |   |   | ۲ |   |   |   |   |   |   |   |
|   |   |   | Ì |   |   |   |   |   |   |   |


#### How to install:

Burn or melt the rope ends to prevent fraying.

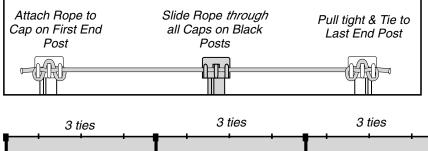



## The Quick-Connect / Disconnect Fence Installation:

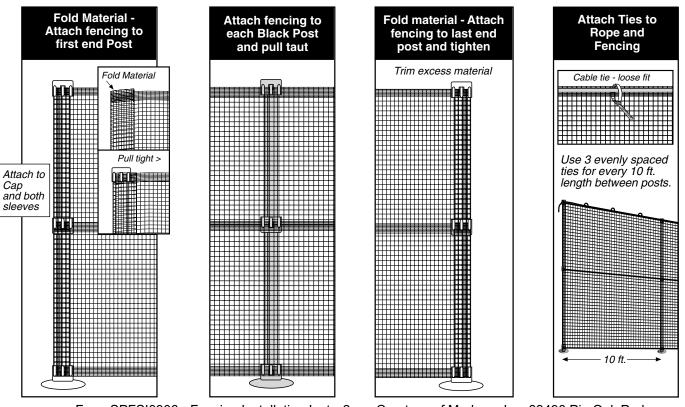

Form SPFSI0906 - Fencing Installation Instr.-2pg

Courtesy of Markers, Inc. 33490 Pin Oak Parkway, Avon Lake, Ohio 44012 www.markersinc.com